



Dlinkap. local

Personal Rank 6



articles 25 comments 0 ratings 0 read 0% time 00:02:17

How To D-link extender setup using the D-link setup wizard? dlinkap.local

Plug the D-link wireless range extender into a power socket. Make sure to place the extender within the wifi signal range of the home router or AP or connect it the router's existing wired network. Switch on the D-link range extender to receive power supply. Allow the status LED to blink amber light indicating receiving of power. Go to the wireless settings/utility section on your computer and select to open it. Select the wireless network name (SSID) field of the D-link wifi extender's network from displayed wifi networks list. Enter the wireless network password for the selected SSID above. The wireless network settings – SSD and password could be located from the included Wi-Fi Configuration Card of the D-link extender. Launch a web browser on your computer connected to wifi network of the D-link wifi extender's network. Navigate to D-link extender login domain address <http://dlinkap.local> or dlinkrouter.local in from the address bar. Either use default IP login <http://192.168.0.50> for d-link extender login instead of dlinkrouter.local. As the D-link extender login page gets directed, enter the D-link extender login information in the given fields. Key in the dlink extender login default username as Admin. Also, to key in the dlink extender default password, leave it blank.